

#### Technology Consulting Company Research, Development &

### How to Write DirectFB gfxdrivers for Your Embedded Platform

Takanari Hayama, Hisao Munakata and Denis Oliver Kropp


#### What is DirectFB?



- Thin Graphics Library
  - Light weight and small footprint (< 700KB Library for SH4)</li>
  - Not server/client model like X11
- Hardware Abstraction Layer for Hardware Graphics Acceleration
  - Anything not supported by Hardware still supported by software, i.e. utilize hardware where possible
- Multi-process support
- And others, e.g. build-in Window Manager etc.

### The First Embedded Chip Support by the Mainline DirectFB – Renesas SH7722



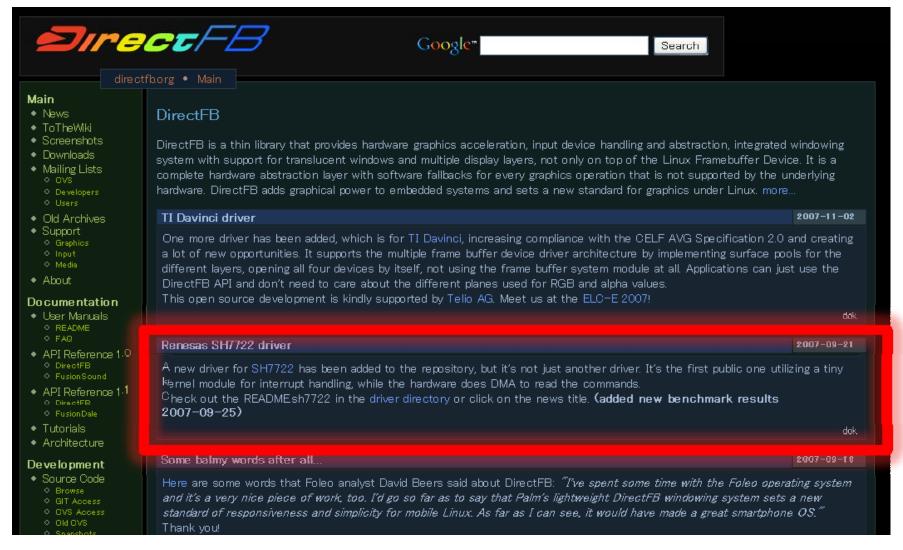


### df\_andi and SawMan running on SH7722





### DirectFB Software Architecture for Renesas SH4 Platform



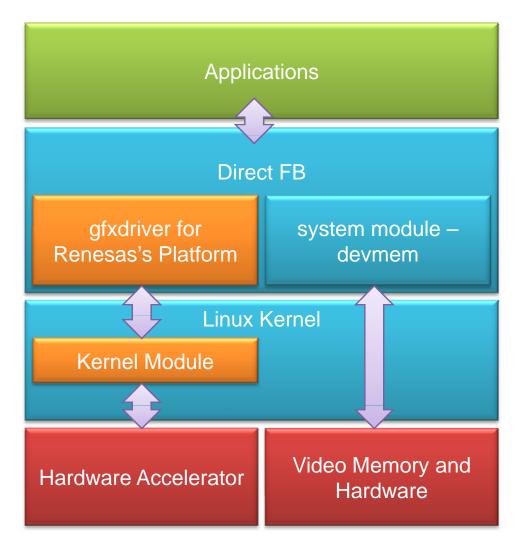

Existing Code

Custom Code

Hardware

#### Important Terms in DirectFB



#### Layers

 Represents independent graphics buffers. Most of embedded devices have more than one layer. They get layered with appropriate alpha blending by hardware, and displayed.

#### Surface

 Reserved memory region to hold pixel data. Drawing and blitting operation in DirectFB is performed from/to surfaces.
 Memory of surfaces could be allocated from video memory or system memory depending on the given constraints.

#### ■ Primary Surface

Special surface that represents frame buffer of particular layer.
 If the primary surface is single buffered, any operation to this primary surface is directly visible to the screen.

### Concept of Layers





Each represents layer


On the screen they are layered.

Here comes subti

#### DirectFB Internal Architecture



- Modules you need are:
  - Systems (optional)
    - systems/\*
  - Graphics Devices
  - Graphics Drivers
    - gfxdrivers/\*
  - Screens
  - Layers
- Each modules have defined function list that have to be implemented, i.e. DirectFB is designed more or less like objectoriented way.

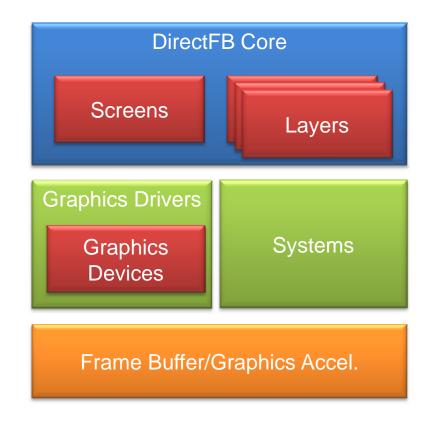

### Device Dependent Modules DirectFB



	Header	Module Declaration/Registration	Required Functions
Systems	<pre>src/core/system.h src/core/core_system.h</pre>	DFB_CORE_SYSTEM( <name>)</name>	See CoreSystemFuncs in core_system.h and system.h
Graphics Drivers	<pre>src/core/graphics_driver .h</pre>	DFB_GRAPHICS_DRIVER( <name>)</name>	See GraphicsDriverFuncsin graphics_driver.h
Graphics Devices	src/core/gfxcard.h	<pre>via driver_init_driver() in GraphicsDriverFuncs</pre>	See GraphicsDeviceFuncs in gfxcard.h
Screens	src/core/screens.h	dfb_screens_register()	See ScreenFuncs in screens.h
Layers	src/core/layers.h	dfb_layers_register()	See DisplayLayerFuncs in layers.h

2,3 Nov 2007 ELC-E 2007

#### Systems



- Frame buffer and hardware management.
  - Provides access to the hardware resources.
- Supported systems in DirectFB 1.1.0
  - fbdev (default)
  - osx
  - sdl
  - vnc
  - -x11
  - devmem
- Can be specified in directfbrc

e.g. system=devmem

### For Embedded: system = devmem



- Merged in DirectFB 1.0.1. Uses /dev/mem to access to graphics hardware and frame buffer.
- Convenient way for those using memory mapped I/O and uniform memory among CPU and graphics accelerator.
  - Most of embedded devices fall into this.
- Additional parameters you must specify:
  - video-phys=<hexaddress>
    - Physical start of video memory (devmem system)
  - video-length=<bytes>
    - Length of video memory (devmem system)
  - mmio-phys=<hexaddress>
    - Physical start of MMIO area (devmem system)
  - mmio-length=<bytes>
    - Length of MMIO area (devmem system)
  - accelerator=<id>
    - Accelerator ID selecting graphics driver (devmem system)

## How DirectFB matches systems and gfxdrivers?



- DirectFB core queries each gfxdrivers whether they support particular hardware accelerator by calling driver\_probe() implemented in each gfxdrivers:
  - int driver\_probe( CoreGraphicsDevice \*device );
- If the particular hardware is supported by the gfxdriver, the function shall return non-zero value, otherwise 0 must be returned.
- When devmem is used, the value passed to driver\_probe() is the value passed by 'accelerator=<id>'. Make sure the values match.

### Graphics Drivers - gfxdriver



- Hardware specific graphics driver core. It consists of the following:
  - Graphics Driver Module
  - Graphics Device Module
  - Screen Module (optional for fbdev, but mandatory for devmem)
  - Layer Module (optional for fbdev, but mandatory for devmem)
- To have your graphics accelerator working, this is the code you must write at minimum!
  - You can use devmem for system. You don't have to write fbdev, if you don't feel like doing so.

### Basics of Writing gfxdriver



- 1. There are bunch of headers you need to refer. Copy them from any gfxdrivers code you can find in gfxdrivers/\* appropriately.
- You must give unique name to the gfxdriver and declare using the following macro:
  - DFB\_GRAPHICS\_DRIVER( sh7722 )
- 3. The macro above requires 6 (six) functions to be defined for use by DirectFB core (see src/core/graphics\_drivers.h).

  Define them.
  - Initialize/Close the gfxdriver
  - Initialize/Close the device
  - Retrieval of Metadata of the gfxdriver
- 4. Graphics acceleration capabilities are bound to the graphics devices via gfxdriver, you must appropriately specify what is supported. Set functions for the supported features. See src/core/qfxcard.h for details.

# Functions you need to define in gfxdrivers



- static int driver\_probe( CoreGraphicsDevice \*device );
  - Should return non-zero value if the driver supports particular hardware passed by device. This is called by DirectFB core to probe which driver supports particular hardware in the system.
- - Set the driver information in info and return.
- - Initialize the driver. After successively acquire all required resources, the driver should register screens and layers. Also needs to return list of callback functions for hardware accelerations via funcs.

# Functions you need to define in gfxdrivers (contd.)



```
static DFBResult
   driver init device (CoreGraphicsDevice *device,
                           GraphicsDeviceInfo *device info,
                           void
                                                  *driver data,
                           void
                                                   *device data );
      Initialize hardware. All necessary hardware initialization should be processed here.
■ static void
   driver_close_device( CoreGraphicsDevice *device,
                                                    *driver data,
                            void
                            void
                                                    *device data );
      Whatever you need to do to while you close the device should come here.
■ static void
   driver_close_driver( CoreGraphicsDevice *device,
                            void
                                                    *driver data );
      Whatever you need to do to while you close the driver should come here.
```

#### How gfxdriver Gets Initialized



- 1. DirectFB calls driver\_probe() in each gfxdriver on the system with a graphics device identifier to find appropriate gfxdriver for the device.
- 2. If driver\_probe() of a gfxdriver returns non-zero, then the DirectFB calls driver\_init\_driver(). In driver\_init\_driver():
  - Register graphics device functions
  - Register screen
  - Register layers
- 3. The DirectFB then calls driver\_init\_device() subsequently. In driver\_init\_device():
  - Set capabilities supported by the device in
     GraphicsDeviceInfo \*device\_info, e.g. graphics
     acceleration capabilities such as Blit/Draw.

#### **Graphics Device Functions**



- You should set graphics device functions in GraphicsDeviceFuncs \*func passed as an argument to driver\_init\_driver().
- You don't have to set all functions. Set only those you really need.
- Most important ones are:
  - Reset/Sync graphics accelerator
  - Check/Set state of the graphics accelerator
  - Blitting/Drawing functions

#### 22 Graphics Device Functions



- void (\*AfterSetVar)( void \*driver\_data, void \*device data );
  - function that is called after variable screeninfo is changed (used for buggy fbdev drivers, that reinitialize something when calling FBIO\_PUT\_VSCREENINFO)
- void (\*EngineReset)( void \*driver\_data, void \*device\_data );
  - Called after driver->InitDevice() and during dfb\_gfxcard\_unlock( true ). The driver should do the one time initialization of the engine, e.g. writing some registers that are supposed to have a fixed value.
  - This happens after mode switching or after returning from OpenGL state (e.g. DRI driver).
- DFBResult (\*EngineSync)( void \*driver\_data, void \*device\_data );
  - Makes sure that graphics hardware has finished all operations.
  - This method is called before the CPU accesses a surface' buffer that had been written to by the hardware after this method has been called the last time.
  - It's also called before entering the OpenGL state (e.g. DRI driver).



- void (\*FlushTextureCache)( void \*driver\_data, void \*device\_data );
  - after the video memory has been written to by the CPU (e.g. modification of a texture)
     make sure the accelerator won't use cached texture data
- void (\*FlushReadCache)( void \*driver\_data, void \*device\_data );
  - After the video memory has been written to by the accelerator make sure the CPU won't read back cached data.
- void (\*SurfaceEnter)( void \*driver\_data, void \*device\_data, CoreSurfaceBuffer \*buffer, DFBSurfaceLockFlags flags );
  - Called before a software access to a video surface buffer.
- void (\*SurfaceLeave)( void \*driver\_data, void \*device\_data, CoreSurfaceBuffer \*buffer );
  - Called after a software access to a video surface buffer.



- void (\*GetSerial)( void \*driver\_data, void \*device\_data, CoreGraphicsSerial \*serial );
  - Return the serial of the last (queued) operation.
  - The serial is used to wait for finishing a specific graphics operation instead of the whole engine being idle.
- DFBResult (\*WaitSerial)( void \*driver\_data, void \*device\_data, const CoreGraphicsSerial \*serial );
  - Makes sure that graphics hardware has finished the specified operation.
- void (\*EmitCommands) ( void \*driver\_data, void \*device\_data );
  - emit any buffered commands, i.e. trigger processing.



- void (\*InvalidateState)( void \*driver\_data, void \*device\_data );
  - Called during dfb\_gfxcard\_lock() to notify the driver that the current rendering state is no longer valid.
- void (\*CheckState)( void \*driver\_data, void \*device\_data, CardState \*state, DFBAccelerationMask accel );
  - Check if the function 'accel' can be accelerated with the 'state'. If that's true, the function sets the 'accel' bit in 'state->accel'. Otherwise the function just returns, no need to clear the bit.
- void (\*SetState) ( void \*driver\_data, void \*device\_data, struct \_GraphicsDeviceFuncs \*funcs, CardState \*state, DFBAccelerationMask accel );
  - Program card for execution of the function 'accel' with the 'state'. 'state->modified' contains information about changed entries. This function has to set at least 'accel' in 'state->set'. The driver should remember 'state->modified' and clear it. The driver may modify 'funcs' depending on 'state' settings.



- bool (\*FillRectangle) ( void \*driver\_data, void \*device\_data, DFBRectangle \*rect );
- bool (\*DrawRectangle) ( void \*driver\_data, void \*device\_data, DFBRectangle \*rect );
- bool (\*DrawLine) ( void \*driver\_data, void \*device\_data, DFBRegion \*line );
- bool (\*FillTriangle) ( void \*driver\_data, void \*device\_data, DFBTriangle \*tri );
  - Drawing functions.



- bool (\*Blit) ( void \*driver\_data, void \*device\_data, DFBRectangle \*rect, int dx, int dy );
- bool (\*StretchBlit) ( void \*driver\_data, void \*device\_data, DFBRectangle \*srect, DFBRectangle \*drect );
- bool (\*TextureTriangles)( void \*driver\_data, void \*device\_data, DFBVertex \*vertices, int num, DFBTriangleFormation formation );
  - Blitting functions.



- void (\*StartDrawing)( void \*driver\_data, void \*device\_data, CardState \*state );
  - Signal beginning of a sequence of operations using this state. Any number of states can be 'drawing'.
- void (\*StopDrawing)( void \*driver\_data, void
  \*device data, CardState \*state );
  - Signal end of sequence, i.e. destination surface is consistent again.

### How DirectFB Calls Hardware Accelerator?



- 1. Check whether the particular functionality is supported by the hardware by calling CheckState() in the gfxdriver.
- 2. If the CheckState() tells DirectFB that particular function is supported by the hardware, then DirectFB subsequently calls SetState(). Otherwise, it falls back to the software rendering.
- 3. In the SetState(), all required parameters shall be taken and prepared to be passed to the hardware.
- 4. After it returns from SetState(), DirectFB finally calls the appropriate drawing/blitting functions, e.g. Blit().

### Advanced Feature – Queuing Draw/Blit Commands



- Some graphics accelerator supports command queuing or command lists. To utilize this feature, you may queue draw/blit as much as you can, and then kick the hardware.
- To do this, EmitCommands() should be defined. See the example in sh7722 gfxdriver.

#### Screens



- Screens represent output device, e.g. LCD.
- If you have fixed size screen, the minimal functions you need to define are:
  - InitScreen()
  - GetScreenSize()
- For more details, see src/core/screens.h.

#### Layers



- Layers represent independent graphics buffers.
- They're basically converged by hardware when they get displayed on the screen.
  - Normally, alpha blending is applied.
- Layers are required to be able to:
  - Change size, pixel format, buffering mode and CLUT.
  - Flip buffer.
- For more details, see src/core/layers.h.

#### Important DisplayLayerFuncs



- LayerDataSize()
  - Returns size of layer data to be stored in shared memory.
- RegionDataSize()
  - Returns size of region data to be stored in shared memory.
- InitLayer()
  - Initialize layer. Called only once by master process.
- TestRegion()
  - Check if given parameters are supported.
- SetRegion()
  - Program hardware with given parameters.
- RemoveRegion()
  - Remove the region.
- FlipRegion()
  - Flip the frame buffer.

### Layers – Change Configuration



- 1. The DirectFB core calls TestRegion() first, to see if the configuration is supported or not. TestRegion() should return DFB\_OK, if the configurations are supported. Otherwise, DFB\_UNSUPPORTED and details should be returned.
- 2. The DirectFB core then calls SetRegion(). In the SetRegion(), you should apply all changes to the hardware.

#### Layers – Flip



- If you support double buffer or triple buffer, you should implement the feature in FlipRegion().
- FlipRegion() is called whenever the flip is needed.


# Allocating Primary Surface Your Way



- DirectFB automatically allocates primary surface by using given size, pixel format, byte pitch alignment and byte offset alignment values.
  - For most hardware, this is enough.
- However, some hardware requires specific way to allocate frame buffer.
  - E.g., a hardware requires 4KB fixed size video pitch, and for memory efficiency it requires two layers to be allocated sideby-side.
- You can always override surface allocation mechanism, and allocates memory your way.
  - This is done in fbdev system as well.

### Allocating Primary Surface Your Way (Contd.) – Normal Memory Allocation



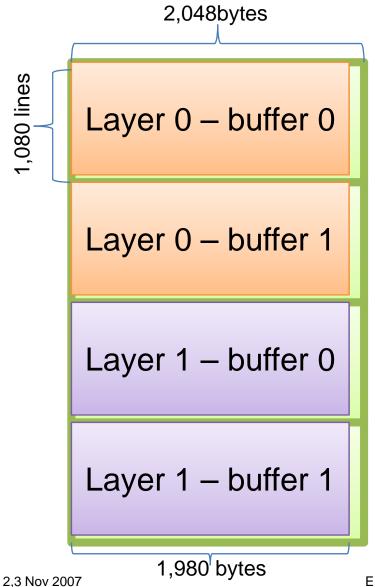


This is typical frame buffer allocation for 2 double buffered layers with CLUT8 in Full HD, i.e. 1980x1080x8bit.

2,3 Nov 2007 ELC-E 2007 34

### Allocating Primary Surface Your Way (Contd.) – Optimized Allocation



4,096 bytes (Fix Video Pitch. H/W Constraint)

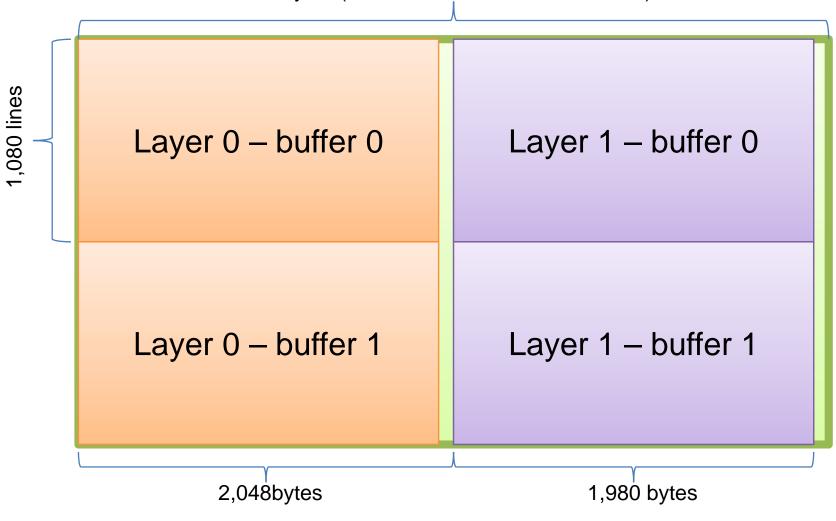

# Allocating Primary Surface Your Way (Contd.)



- Define AllocateSurface() and ReallocateSurface() in DisplayLayerFuncs.
  - You should just make sure you create an appropriate container for surface, i.e. CoreSurface.
- 2. Allocate or reallocate surface in SetRegion().
  - May claim video memory by calling dfb\_surface\_create(),
     and resize if necessary with dfb\_surface\_reformat().
  - Should claim the memory from video memory.
  - Don't forget to call dfb\_surface\_globalize() to make this surface visible to others as well.
  - Set primary surface's video memory offset appropriately: front\_buffer->video.offset, back\_buffer->vidoe.offset, and idle\_buffer->video.offset.



#### **HAVE FUN WITH DIRECTFB!**